

ULTRASONIC ULP 485

CMI1017 User manual









0. Index

- 1. Product overview
- 2. Package content
- 3. Technical specifications
- 3.1 Dimensions
- 3.2. Weight
- 3.3. Power
- 3.4. Sensors
- 3.5. Wind information
- 3.6. Easy mount
- 3.7. Firmware
- 3.8 Limitations
- 3.9 Quality control
- 4. Configuration options
- 5. General information
- 5.1. General recommendations
- 5.2. Maintenance and repair
- 5.3. Warranty

1. Product overview

Thank you for choosing the ULP485 Ultrasonic Anemometer from Calvoso Instruments This ULP485 is the first model or our generation II. representing an important technology breakthrough condensing an extensive R+D investment:

- · Both shape and firmware have been enhanced for an improved rain performance, being this point key for static applications such as weather stations.
- · Mechanical design has been revamped making the unit more robust and dependable.
- · We feel very proud to release a unit that requires under 0.4 mA of power at 5V, sampling at 1Hz.
- RS485 output. Further protocols under request.

Applications for the ULP485 are the following:

Weather Stations | Drones Temporary Scaffolding and construction I Infrastructures and building | Cranes Spraying | Irrigation | Fertilizing | Precision Agriculture Smart Cities | Wild fires | Shooting | Scientific

2. Package content

The package contains the following:

- · Ultrasonic Wired Wind Instrument + cable 2 meters for connection
- · Serial number reference in the back of the packaging
- · Quality control referece in the same place as the previousone.

(Both shown in the Image 1)

- · User Quick guide at the back of the packaging and some more information useful for the customer.
- · Connection instructions picture including at the box package.
- · M4 headless screw (x6)
- · M4 screw(x3)



Image 1. Serial number/Control quality label

3. Technical specifications

ULP485 incorporates the following technical specifications:

3.1. Dimensions

· Diameter: 68 mm

Height: 65 mm



Image 2. Main dimensions of the unit.

Noth mark position Make sure the north mark is perfectly aligned.

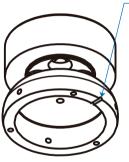


Image 3. North mark.

Image 4. Screw holes position







3.2.Weight

M4x0.5



M4x0.5

3. Technical specifications

(continuation)

3.3. Power · 3,3 -24 V

ULP 485 has to be connected as is shown below:

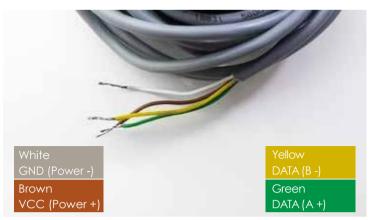


Image 5. Cable connections.

Data interface	I-RS485 continuous output 2-POLL output 3-Any other ptrotocol under demand.
Data format	NMEA0183
Baudrate	2400 to 115200 bauds
Voltage range	3,3-24V

3.4. Sensors

• Ultrasonic transducers (4x)

• Sample rate: 0.1 Hz to 20 Hz

The ULP485 has been designed to avoid any mechanical parts to maximize reliability and minimize maintenance.

The transducers communicate between themselves two by two using ultrasonic range waves. Each couple of transductors calculates the signal delay and gets information about both, wind direction and wind speed.

3.5. Wind information

Windspeed

· Wind direction

Wind speed Range: 0 - 40 m/s

Accuracy: ±0.1 m/s at 10m/s

Wind direction Range: 0 - 360° Accuracy: ± 1° 3.6. Easy mount

· 3xM4 lateral female thread

3xM4 inferior female thread

Lateral and inferior female thread. It can be mounted either on a plate (inferior screws) or on a tube (lateral screws)















3. Technical specifications

(continuation)

3.7. Firmware

· Upgradable via RS485

3.8 Limitations

ULP485 is engineered to be a robust device with minimal downtime. This new shape has been designed for optimum water spillage which implies lower probability of ice formation. Frost might affect measurements if it blocks the wave path.

The input wires are protected by Transient Voltage Suppression (TVS) diodes. Also, the instrument body is built in Polyamide.

3.9. Quality control

Every single unit is automatically calibrated on a wind tunnel. A Q/C report for both module and angle is generated and kept in our files. Standard deviation is checked to warranty that each unit is been calibrated to the hightest standards.

4. Configuration options

baudrate 2400 to 115200 (8n1) bauds output rate: 0.1 to 20 Hz. output units: m/sec., Knots or Km/h.

The Ultrasonic ULP can be set up by using a special App made by Calypso Instruments.

In order to use the APP you should download the following documentation:

Ultrasonic ULP 485 configurator.exe

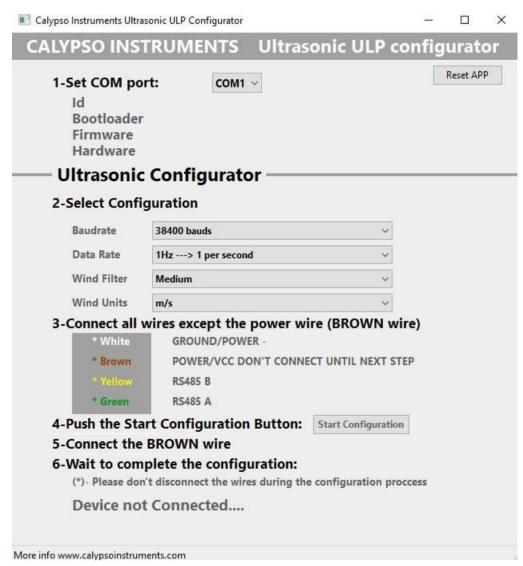


Image 8. Main screen.





5. General information

5.1. General recommendations

As described previously is important to understand that the unit can be mounted directly on a pole or using a flat bracket. In either case make sure the north mark is perfectly aligned.

Then install the sensor in a location free from wind perturbation.

Other important aspects

- · Do not try to modify by any case the unit.
- · Avoid touching the transducers
- Do not modify/customize the surface of the unit.

If you have any questions or doubts, please contact directly with us. We will be glad to assist you in any time

5.2. Maintenance and repair

Thanks to the mechanical simplicity the ultrasonic does not require mechanical maintenance.

Transducers must be kept clean and aligned. Impacts or incorrect impulsive handling may lead to transducers misalignment.

The space in between the transducers and its reflection surface must be empty and clean. Dust, frost, water, etc... will make the unit stop working. Rinse with fresh water and let it dry.

5.2. Warranty

Warranty is void in case of non-following the instructions of use, repair or maintenance without written authorization. Every Calypso product offers a 2-Year Performance Warranty.

Calypso Instruments shall not be liable for any damages arising out of:

- -Exposition of the Ultrasonic at temperatures out of the range stated above.
- Transducers misalignment or damage due to external impact.
- $\boldsymbol{\mathsf{-}}$ Solar cell damage due to removing the protecting film.

- Geometry changes on the flow channel due to external actions.
- Use inappropriate voltages.
- Do not installed the ultrasonic as stated above which causes damage on the ultrasonic.

You can return unopened items in the original packaging within 30 days of your purchase with proof of purchase. Upon receipt of the returned item, we will fully examine it and notify you via email, within a reasonable period of time on the status. If we decide a return is appropriate, we will refund your purchase price and a credit will be applied to your original method of payment.

For further information please contact Calypso Technical Support through aftersales @calypsoinstruments.com or visit www.calypsoinstruments.com.

Calypso Instruments team thanks you for your confidence.



C/ San Jorge, I, 4° B 50001 Zaragoza Spain Telephone number: +34 976 291 839 E-mail: sales@calypsoinstruments.com aftersales@calypsoinstruments.com

Calypso Instruments is a Trademark of Prodeo Ingeniería y Consultoría



ULTRASONIC ULP 485 User manual English version 1.0 01/03/2020